


## Cutting down ready made roller blinds.

To reduce the width of your roller blind follow these guidelines:

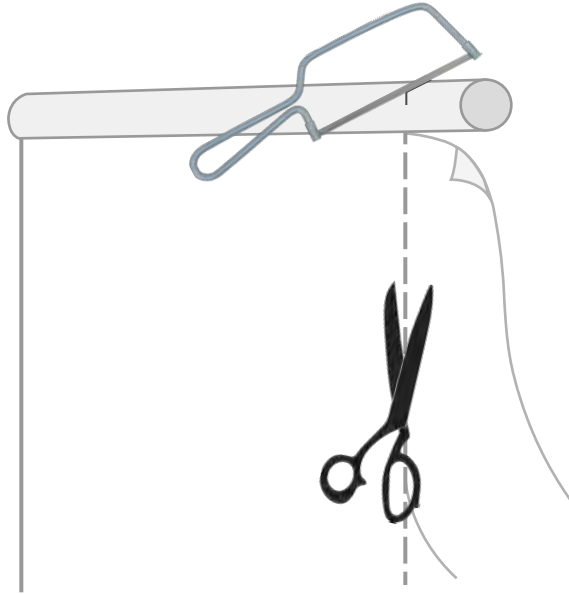

- 1) First fix the brackets in the position you want them at the window. Then using a metal tape, measure from the outside edge of one bracket to the outside edge of the other bracket and record the measurement.
- 2) Next measure the thickness of the winding mechanism and deduct this from the measurement you have just taken. Do not cut the blind until you have made this allowance.
- 3) Using a junior hacksaw, cut the aluminium roller tube to that size. Then trim the fabric to the same size as the tube using a sharp pair of scissors or a cutting knife.
- 4) Now insert the winding mechanism into the tube. Then fit the assembled roller blind back into the brackets and test it operates smoothly and correctly.
- 5) Finally, Make a cup of tea (or coffee), sit back and admire your handywork!