



### Mounting Hardware :

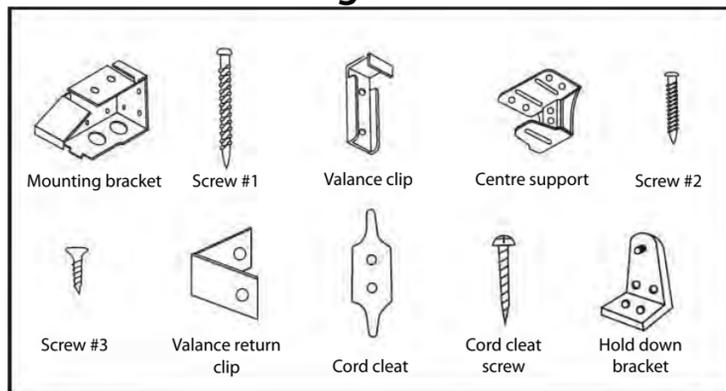


(Note : Centre support supplied for blind width 100 cm or over)

### Tools Recommended for Installation :

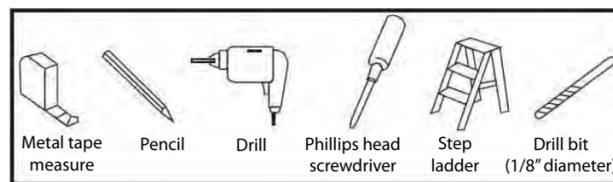

### Mounting Instructions

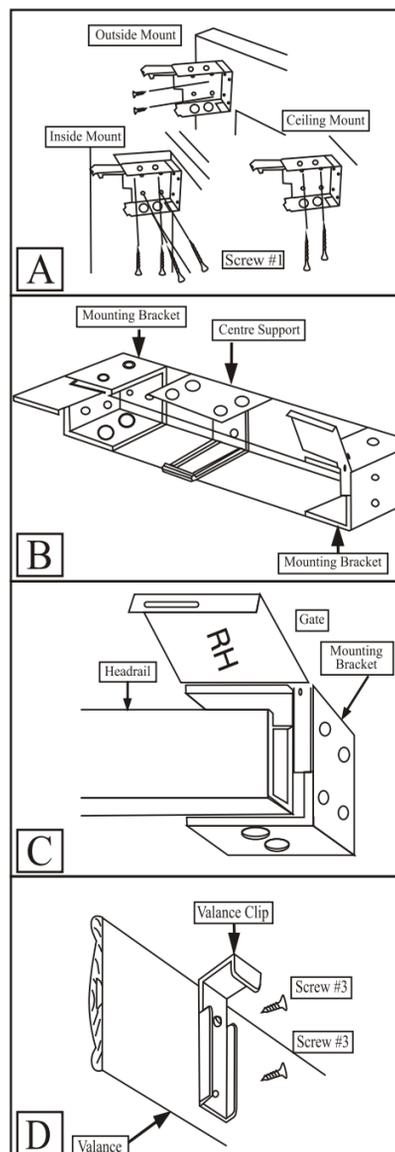


Brackets should be placed at the width of blinds headrail 5mm past each end. The bracket doesn't necessarily need to touch the inside face of the window frame.

Align the top of the centre support bracket with the top of the mounting bracket before installation. Install with bigger flap of the centre support bracket on the top side and clear of the slat ladder positions.

Push rail into brackets. Then press gate to close brackets.

Screw valance clips onto back side of the pelmet with screws provided (Screw #3)

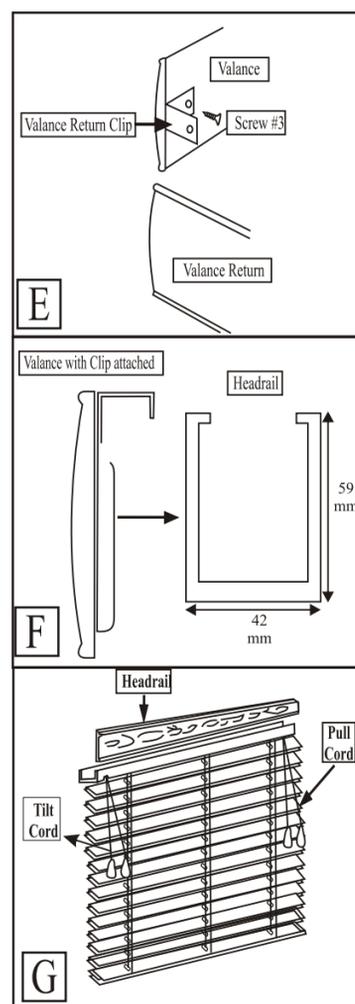

For Outside Mount : Screw one end of the valance return clip onto the valance using screw #3. Align the edge of the valance return with the valance. Screw the other end of the valance return clip onto the valance return.


Hook valance clip with valance attached onto the top of the headrail.

Always tilt blind horizontally before raising or lowering to extend life of the blind. **To Lower Blind** : Move cord to the left, pulling down gently until cord lock releases. **To Raise Blind** : Pull cord downward until blind reaches desired height. **To Lock cords** : Pull cord right and release. Cord will lock automatically.


### Recommended Care for Wooden Blinds

1. When opening or closing the blind, only raise or lower the blind when the slats are in the horizontal (open position). Larger blinds must be raised or lowered in stages. Raising or lowering in one singular motion places excessive stress on the mechanism, strings and brackets.  
Do not force the cord when tilting the blinds, this may cause the mechanism to reak.
2. It is not recommended that timber venetian blinds be fitted in damp or wet environments as warpage may occur.
3. Keep the blinds clean by dusting them regularly
4. If the blind becomes damp or wet, wipe down immediately. The slats should be horizontal (open) and the blind released and lowered completely. Allow to dry by removing the blinds from the brackets and lay down on a hard surface. Do not place in direct sunlight as excessive heat may cause the slats to warp. If the blinds excessively wet, do not place the blinds on to a surface that may absorb any stain.
5. This wooden venetian blind does not require any oiling.

### Installing Hold down brackets (optional):

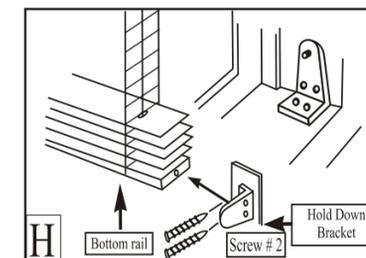

Hold Down Brackets : Using two small screws, screw hold down bracket to window frame or wall. Snap bracket pin ends into the hole at bottom rail end.

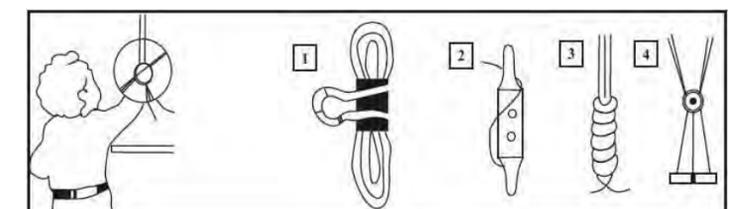

### Warning!

Children can be strangled in blind or drapery cords. To keep cords out of the reach of children, use these methods:

- |                         |                           |
|-------------------------|---------------------------|
| 1. Clamp or clothes pin | 1. Tie the cord to itself |
| 2. Cleat                | 2. Tie-down device        |